MEASURING ROLLER CHAIN LENGTH





Figure 1: Measuring 10 Pitch Section with a Caliper



Figure 2: Measuring 10 Pitches of 60-1 Chain with a Tape Measure

INSTRUCTIONS

- The measurement should contain equal number of roller links and pin links.
- 2. Measuring longer sections will give more realistic estimations.
- 3. Chain on equipment should be measured on the tension side.
- 4. Measurement is outside of pin to outside of pin.
- Chain not on equipment requires the specified minimum measuring load.

Note: In applications, the tape measure is the most common tool used to measure chain length. However, a caliper will be more accurate and should be used when possible.

TABLE 1. MEASUREMENT SPECS NEEDED PER CHAIN SIZE

| Chain Size | P = Pitch | PD = Pin Diameter | Minimum Measuring Load |
|----------------|-----------|----------------------|------------------------------|
| | in. | in. | lb. |
| 25 | 0.250 | 0.090 | 8 |
| 35 | 0.375 | 0.141 | 18 |
| 40 | 0.500 | 0.156 | 31 |
| 50 | 0.625 | 0.200 | 49 |
| 60 | 0.750 | 0.234 | 70 |
| 80 | 1.000 | 0.313 | 125 |
| D16B | 1.000 | 0.326 | 125 |
| 100 | 1.250 | 0.375 | 195 |
| 120 | 1.500 | 0.437 | 281 |
| 140 | 1.750 | 0.500 | 383 |
| 160 | 2.000 | 0.562 | 500 |
| 180 | 2.250 | 0.687 | 633 |
| 200 | 2.500 | 0.781 | 781 |
| 240 | 3.000 | 0.937 | 1,000 |
| C550 | 1.630 | 0.281 | 140 |
| C550HD | 1.630 | 0.326 | 170 |
| C555 | 1.630 | 0.281 | 110 |
| C557 | 1.630 | 0.315 | 170 |
| C960 | 1.630 | 0.350 | 205 |
| C620 | 1.654 | 0.281 | 170 |
| C551X | 1.630 | 0.437 | 240 |
| C2040 | 1.000 | 0.156 | 31 |
| C2050 | 1.250 | 0.200 | 49 |
| C2060H | 1.500 | 0.234 | 70 |
| C2080H | 2.000 | 0.313 | 125 |
| C2100H | 2.500 | 0.375 | 195 |
| C2120H | 3.000 | 0.437 | 281 |
| C2140H | 3.500 | 0.500 | 383 |
| C2160H | 4.000 | 0.562 | 500 |
| 81XKD / 81XHKD | 2.609 | 0.437 | 240 |
| 3000HKD | 3.000 | 0.750 | 700 |

CHAIN % ELONGATION FORMULA

P Pitch [inches] Table 1

NP Number of Pitches # of Measured Pitches

NLNominal Length [inches]NL = P * NPPDPin Diameter [inches]Table 1

ML Measured Length [inches] From Tape Measure or Caliper

AML Adjusted Measured Length [inches] AML = ML - PD

% Elongation =
$$\frac{(AML - NL)}{NL} * 100$$

07-25 Order No. 11264 | Timken®, Diamond®, Drives® and EZ Chain Wear Gauge® are registered or licensed trademarks of The Timken Company or its affiliates. | © 2025 The Timken Company


EZ CHAIN WEAR GAUGE®

Check the life of your chain




STEP 1

Indentify chain pitch size.

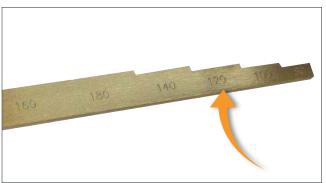

STEP 2

Locate the corresponding step on the gauge.

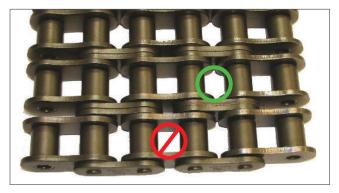

STEP 3

Check gauge for fit between any two roller links.

(Perform with chain in tension.)



STEP 4

If the gauge step fits through the checkpoint, the chain is worn out and needs to be replaced.

Note: Gauge should be in line, directly below any outside link plate.

